



## IMPORANT INFORMATION

These instructions must be read and understood by all operators and strictly adhered to

### Safety Check list prior to use

1. Ensure attachment is compatible and fits your materials handler correctly. Check for wear and misalignment on the back plate of your materials handler
2. Check hydraulic connections for compatibility and condition. Ensure connections are clean

### Attaching to Materials Handler

1. Do not, at any time, stand under raised attachment
2. Hook up materials handler to attachment fully crowded back
3. Extend locking pins either manually or hydraulically to secure attachment to materials handlers. Visually check they are in the correct position. Do not stand under raised attachment
4. Stop Engine. Relieve hydraulic pressure and connect hydraulic hoses. Do not stand under raised attachment.
5. Restart engine. Operate to full extent of rams. Check visually for leaks. Do not stand under raised attachment. Should a leak be discovered, stop engine and relieve hydraulic pressure. Attachments must not be used if any leaks are detected on hydraulic hoses

### Headstocks and Adaptor Plates

- 1 DO NOT exceed the maximum safe working load (SWL) of the headstock/adaptor plate as listed on the serial plate



Director: G.F. Cherry

Cherry Products Ltd. Oathill, Enstone, Chipping Norton, Oxon OX7 4ED

Tel: 01608 678 197 Fax: 01608 677 778

Web: [www.cherryproducts.co.uk](http://www.cherryproducts.co.uk)

Registered In England. 3458481 VAT No. 348 8353 21



## IMPORTANT INFORMATION

### Operating Instructions

1. Do not stand on, under or near attachment when it is liable to move or be operated
2. On certain machines it may be possible to foul tyres with attachments. To avoid this, the following must be adhered to:-
  - A. Operators must familiarise themselves with attachments & their use.
  - B. When operating the vehicle on full lock reverse motion, ensure that attachments do not foul tyres on full tilt
3. Only use the attachment for the purpose it was intended for
4. In respect of fork and grab attachments, we recommend that these are left in a closed position when not in use and detached from materials handler

### Routine Maintenance

1. Check hydraulic hoses daily for damage, wear & leaks
2. Check all nuts, bolted connections and tines daily for tightness
3. All lubrication points must be attended to regularly (weekly at a minimum)
4. Replace specific wearable parts (e.g. toe plates) before damage to the main unit occurs

**IF IN ANY DOUBT ON ANY OF THE ABOVE, OR IF DAMAGE TO THE ATTACHMENT OCCURS, CONTACT CHERRY PRODUCTS**



**Director:** G.F. Cherry

**Cherry Products Ltd.** Oathill, Enstone, Chipping Norton, Oxon  
OX7 4ED

**Tel:** 01608 678 197 **Fax:** 01608 677 778

**Web:** [www.cherryproducts.co.uk](http://www.cherryproducts.co.uk)

**Registered In England.** 3458481 **VAT No.** 348 8353 21